 



Setting the combination

 
1.Initial combination password is 0-0-0-0



2.Re-set the combination , press the back side button,then turn left 90°, rollover the wheel to set the new combination

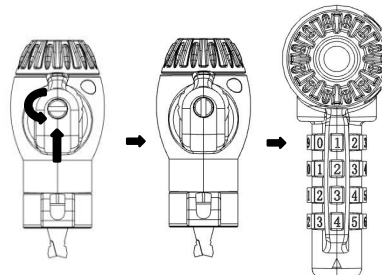


3.Set your 4-digit combination, turn the button right'm 90°, then the button release to regular position,your combination is now set




Instruction(The lock is available for 3X7mm, 2.5X6mm(Nano slot), 3.2x4.5mm and 3X5mm lock slot(NOBLE WEDGE SLOT))


1.Find an object (e.g table) to secure the lock and run the lock through the cable loop

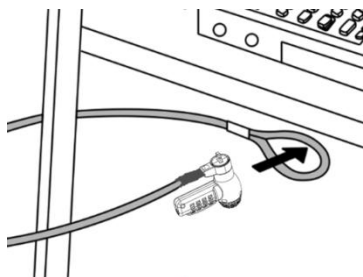


2.Turn the number to your own set combination, Push back the button at the same time insert the lock into the computer slot.

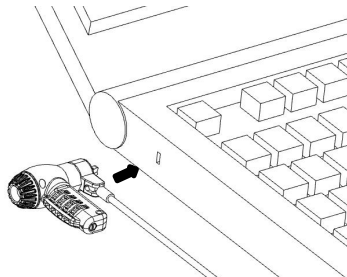

3.Release the button and mix the number combination your equipment is now locked.

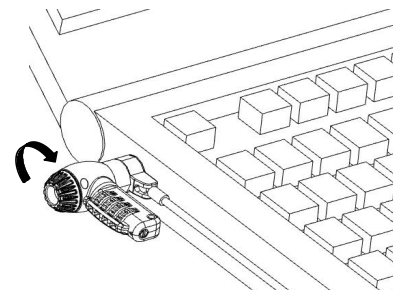


4.Turn the number to your own set combination,at the same time remove the lock out from the slot.

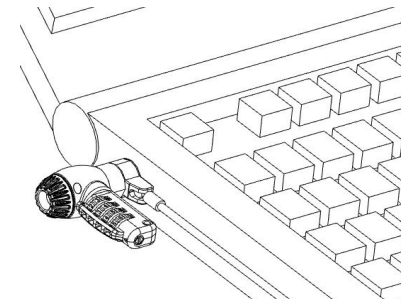


How to open

1.Adjust the character wheel to the correct password, then turn the dial counterclockwise until it cannot be turned.

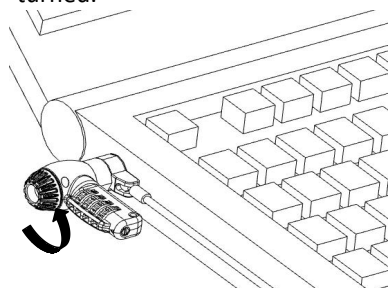

2.Pull out the combination lock to complete the unlocking.

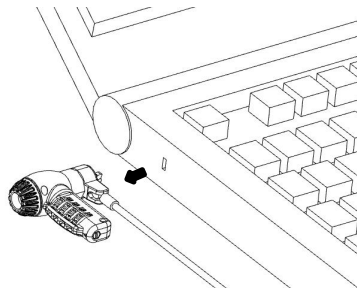

Write down the password you set for future use

ATTENTION

□-□-□-□



If the user loses or forgets the password, the manufacturer has no master key!